


DRILL & TAP 1/4-20 THDS.
THRU THIS SIDE OF DOOR
ONLY, 2-PLACES

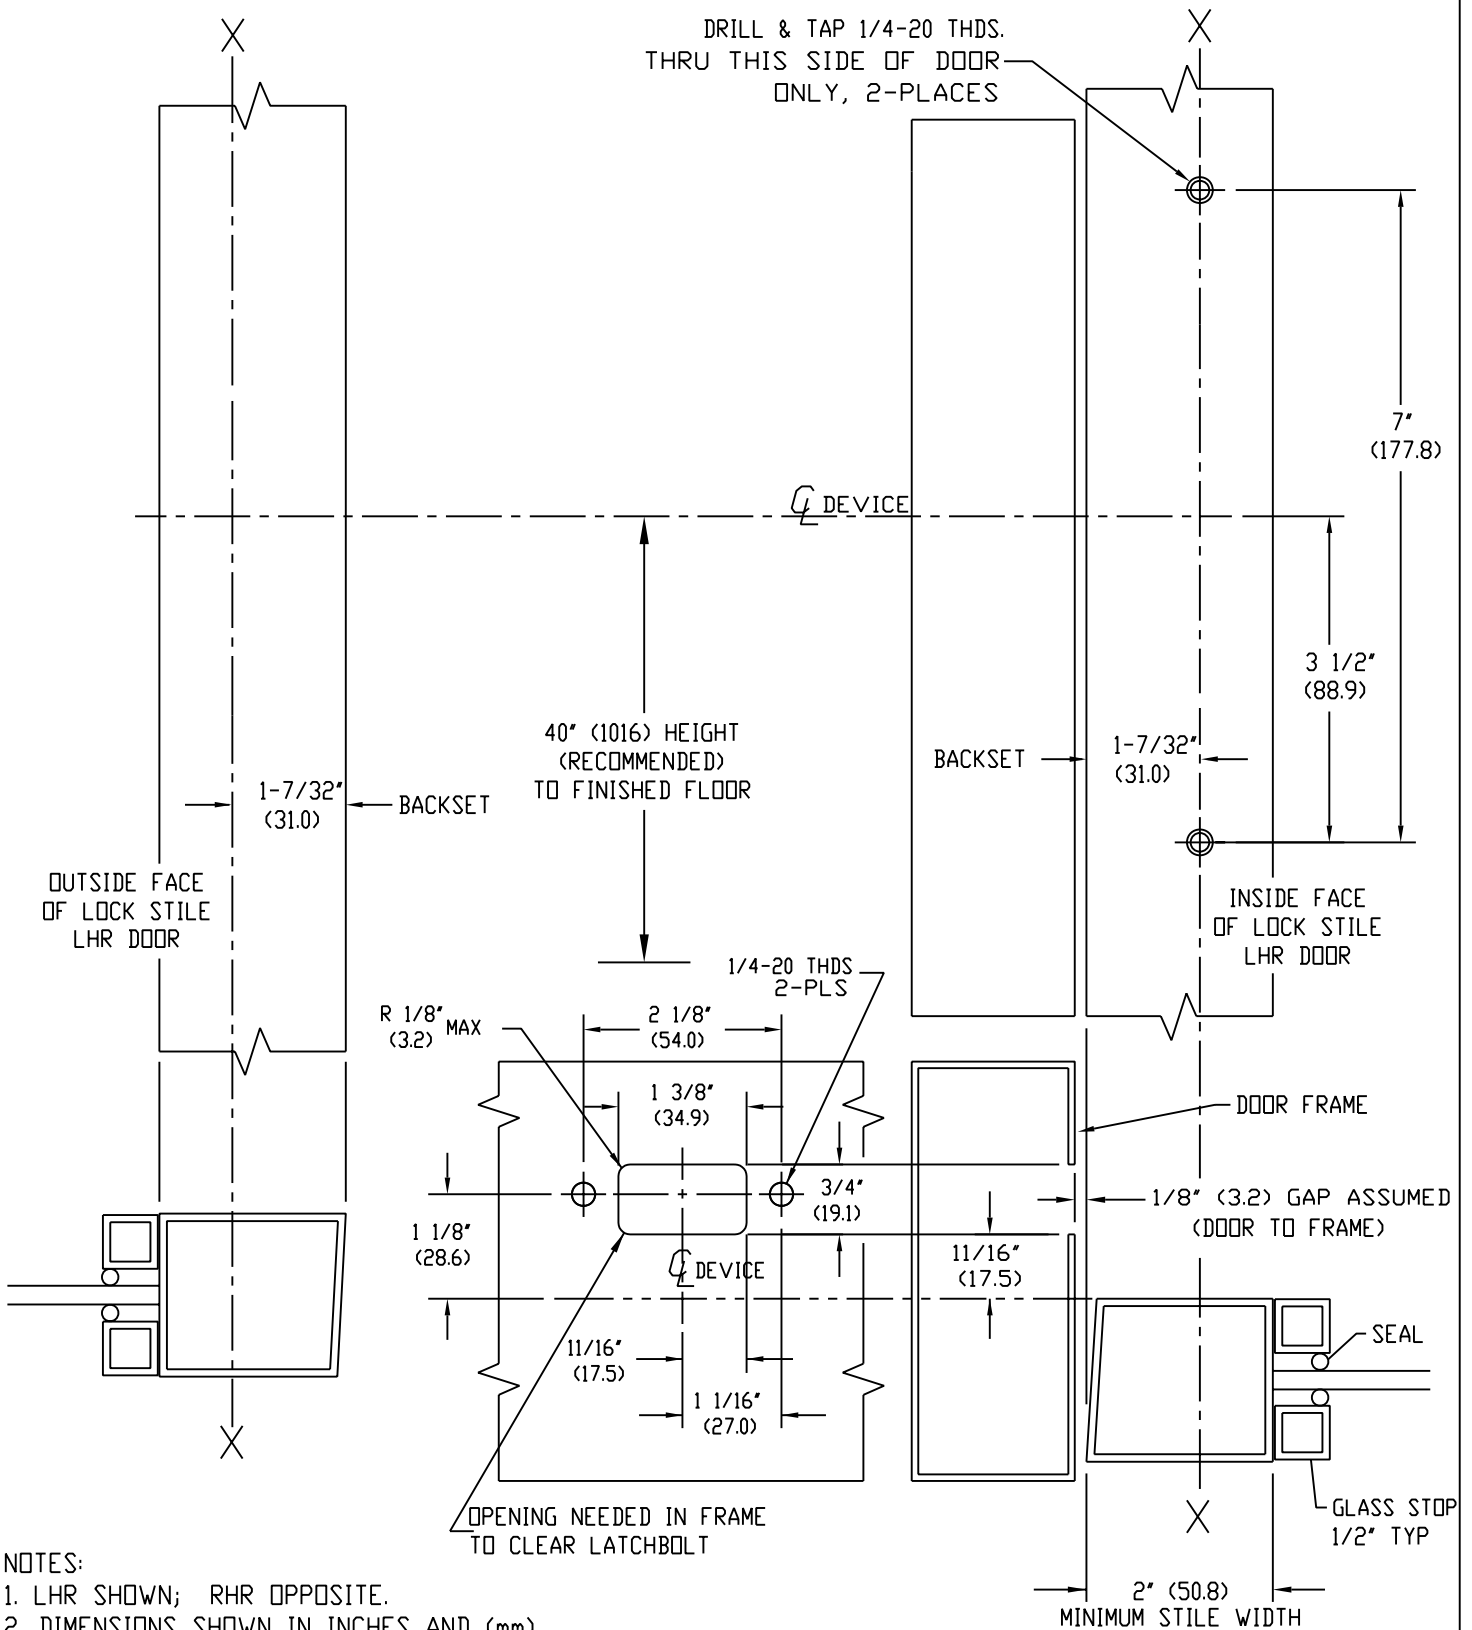

- NOTES:
 1. LHR SHOWN; RHR OPPOSITE.
 2. DIMENSIONS SHOWN IN INCHES AND (mm)
 3. USE 98 STRIKE

HDG. _____ DR. _____

RESPONSIBILITY
 Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames regardless of the type, material or method of construction.

TEMPLATE
 ALUMINUM DOOR
 4001 & F4001 SERIES
 V4001 & FV4001 SERIES
 RIM EXIT DEVICE
 BP-2 or BP-8 MOUNTING PLATE

DETEX
CORPORATION

DO NOT SCALE DRAWING

DATE 6/21/05	TEMPLATE NUMBER T1010
-----------------	--------------------------